

YOUR Z88 UP AND RUNNING


LOAD BATTERIES

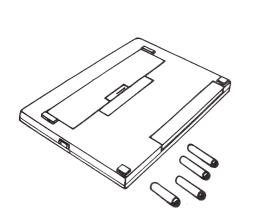


1 Use 4×MN1500, LR6 or equivalent Alkaline cells

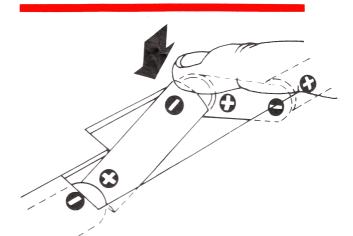

2 Load batteries

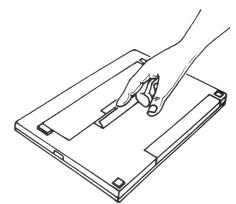


3 Replace battery cover

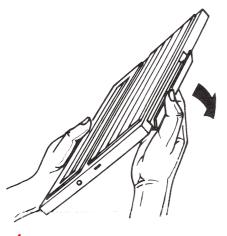

4 Open flap




5 Press reset

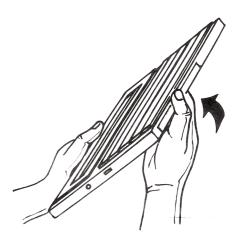


6 Close flap


RAM PACKS AND EPROM PACKS

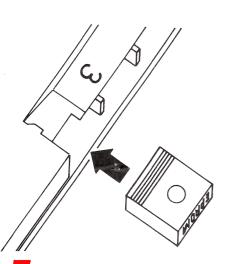

7 Select vacant slot*

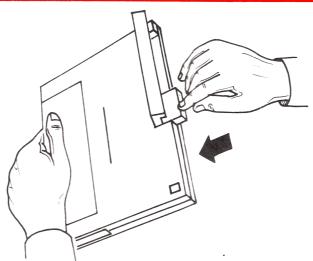

8 Push cartridge in

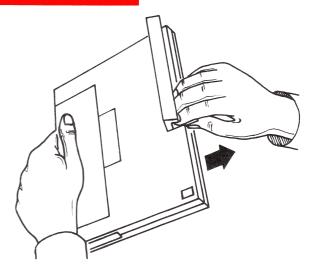

9 Cartridge removal





10 Press both shift keys at the same time

KEYBOARD



Clean keyboard with lint free damp cloth

CONTRAST



12 Rotate control for optimum contrast